

PAIRING THE WIRELESS SPEAKERS WITH THE BASE STATION

What does it mean to Pair?

Pairing the base station with a wireless speaker allows the base station to recognize that wireless speaker. Once paired, the base station will remember that wireless speaker and transmit audio through it.

Link Indicators

Off

Powered off.

Slow Flashes

Standby mode.

Quick Flashes

Attempting to pair.

Solid Light

Paired and playing.

If the base station is not playing audio, either from the dock for iPod or the Auxiliary input, then both the base station and wireless speakers will go into Standby mode. Once you begin playing audio from the base station, both the base station and wireless speaker will come out of Standby mode.

Transmission Range

Once the base station is paired with a wireless speaker, the wireless speaker can be moved approximately 200ft (line-of-sight) or 90ft (indoors) and still receive audio from the base station.

Results will vary depending on the number and size of obstructions between the base station and the wireless speaker.

How many speakers can I pair to one base station?

Up to 20 wireless speakers can be paired with one base station. Additional speakers are sold separately.

Pairing

The two wireless speakers included in the same box as the base station are pre-paired with that base station. Any additional speakers will need to be paired by following the directions below.

*When pairing the base station with a wireless speaker you will need to press the **Pair** button on the base station and wireless speaker simultaneously. Because of this, you will need to have both the base station and wireless speaker within reach when you pair them.*

1. Plug the base station into a power source, and press the **Power** button to power the base station on.

*The base station **Link Indicator** will flash when the base station is powered on.*

2. Plug the wireless speaker into a power source or insert 6 D batteries, not included, and press the **Power** button to power the wireless speaker on.

*The wireless speaker **Link Indicator** will flash when the wireless speaker is powered on.*

3. Adjust the **Volume** on the wireless speaker to approximately the half-way point between min. and max volume.
4. Simultaneously press and hold the **Pair** button on the base station and the **Pair** button on the wireless speaker for 5 seconds.
5. The wireless speaker will emit a long beep when it is paired with the base station.

If the wireless speaker emits short repeating beeps, it was not able to pair with the base station. Repeat steps 1-4 until you hear the long beep.

After pairing, the wireless speaker may take up to 30 seconds to begin playing audio from the paired base station.

Repeat steps 1-4 for each additional wireless speaker you want to pair with the base station.



IS809B - Click to View the Full User's Guide



IS819B - Click to View the Full User's Guide



S809B - Click to View the Full User's Guide